




CST Studio Suite® 2023

GPU Computing Guide

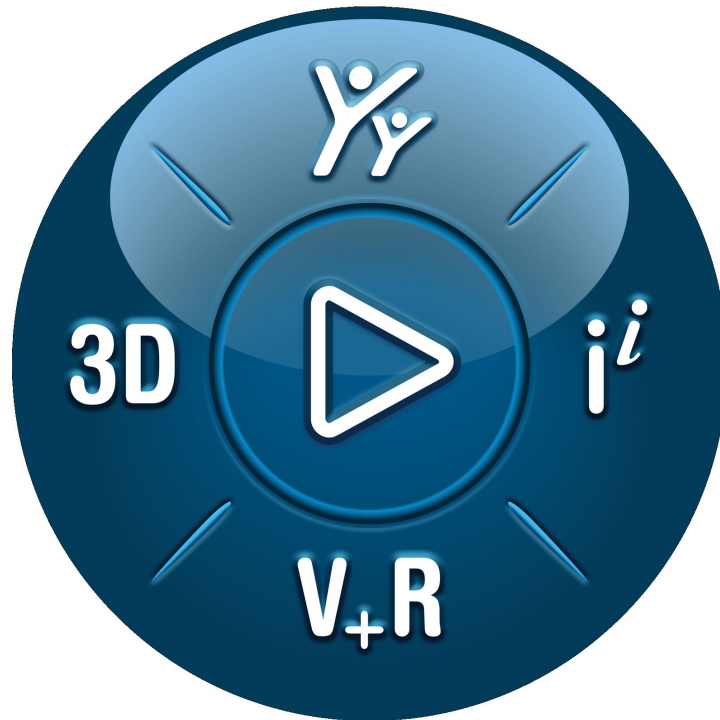

3DEXPERIENCE®

Copyright 1998-2022 Dassault Systemes Deutschland GmbH.

CST Studio Suite is a Dassault Systemes product.

All rights reserved.

Contents

1	Nomenclature	4
2	Supported Hardware	5
2.1	Supported Solvers and Features for NVIDIA GPUs	5
2.2	Supported Solvers and Features for AMD GPUs	6
3	Operating System Support	6
4	Licensing	6
5	Switch On GPU Computing	6
5.1	Interactive Simulations	6
5.2	Simulations in Batch Mode	7
6	List of supported NVIDIA GPU hardware for CST Studio Suite 2023	7
7	List of deprecated NVIDIA GPU hardware for CST Studio Suite 2023	11
8	Unsupported NVIDIA Hardware	12
9	NVIDIA Drivers Download and Installation	13
9.1	GPU Driver Installation	13
9.2	Verifying Correct Installation of GPU Hardware and Drivers	16
9.3	Uninstalling NVIDIA Drivers	17
10	NVIDIA Usage Guidelines	18
10.1	The Error Correction Code (ECC) Feature	18
10.2	Tesla Compute Cluster (TCC) Mode	20
10.3	Exclusive Compute Mode	21
10.4	Display Link	21
10.5	Combined MPI Computing and GPU Computing	21
10.6	Service User	21
10.7	GPU Computing using Windows Remote Desktop (RDP)	21
10.8	Running Multiple Simulations at the Same Time	22
10.9	Video Card Drivers	22
10.10	Operating Conditions	22
10.11	Latest CST Service Pack	22
10.12	GPU Monitoring/Utilization	23
10.13	Select Subset of Available GPU Cards	24
11	NVIDIA GPU Boost	25
12	NVIDIA Troubleshooting Tips	28

13 List of supported AMD GPU hardware for CST Studio Suite 2023	30
13.1 Supported GPUs: General information	31
13.2 Supported GPUs: Specifications	31
14 Unsupported AMD Hardware	32
15 AMD Drivers Download and Installation	32
15.1 GPU Driver Installation	32
16 History of Changes	33

1 Nomenclature

The following section explains the nomenclature used in this document.

<code>command</code>	Commands you have to enter either on a command prompt (cmd on MS Windows or your favorite shell on Linux) are typeset using typewriter fonts.
<code><...></code>	Within commands the sections you should replace according to your environment are enclosed in " <code><...></code> ". For example " <code><CST_DIR></code> " should be replaced by the directory where you have installed CST Studio Suite (e.g. " <code>c:\Program Files\CST Studio Suite</code> ").

2 Supported Hardware

CST Studio Suite supports Hardware Acceleration for various Solvers and GPUs. In combination with NVIDIA GPUs many different kind of Solvers and GPUs are supported. Please check the tables below for more details.

Starting with CST Studio Suite 2021 also selected AMD GPUs are supported to accelerate the Time Domain Solver only. For more information please contact our local 3DS/SIMULIA support team (<https://www.3ds.com/products-services/simulia/locations>).

CST Studio Suite currently supports up to 16 GPU devices in a single host system, meaning each number of GPU devices between 1 and 16 is supported.¹

2.1 Supported Solvers and Features for NVIDIA GPUs

- Time Domain Solver (T-HEX-solver and TLM-solver)
- Integral Equation Solver (direct solver and MLFMM only)
 - GPUs with good double precision performance required
- Multilayer solver (M-solver)
 - GPUs with good double precision performance required
- Particle-In-Cell (PIC-solver)
 - Modulation of External Fields not supported
 - Open Boundaries not supported
- Electrostatic Particle-In-Cell (Es-PIC-solver)
 - Multi-GPU not supported
 - Field-dependent Particle Sources and Particle Interfaces not supported
 - Secondary Emission from Solids not supported
 - Monte-Carlo Collision Models: Excitation and Scattering not supported
 - Particle 2D and Current Density Monitors not supported
 - Sheet Transparency for Particles not supported
 - Particle Losses on Solids not supported
 - Periodic Boundary Conditions not supported
- Conjugate Heat Transfer Solver (CHT-solver)

¹It is strongly recommended to contact CST before purchasing a system with more than four GPU cards to ensure that the hardware is working properly and is configured correctly for CST Studio Suite.

- Asymptotic Solver (A-solver)
 - GPUs with good double precision performance required
 - On Windows TCC mode is required

2.2 Supported Solvers and Features for AMD GPUs

- Transient HEX Solver (T-HEX-solver)

3 Operating System Support

CST Studio Suite is continuously tested on different operating systems. For a list of supported operating systems please refer to

<https://updates.cst.com/downloads/CST-OS-Support.pdf>

In general, GPU computing can be used on any of the supported operating systems.

4 Licensing

The GPU computing feature is licensed either by Acceleration Tokens with CST Studio Suite License Model or by SimUnit tokens or credits with the SIMULIA Unified License model. I.e. your license must contain a sufficient amount of Acceleration Tokens or SimUnit tokens/credits, depending on the used hardware configuration and license model, if you want to accelerate your simulations by using a GPU. Please contact your Dassault Systèmes sales representative for further information.

5 Switch On GPU Computing

5.1 Interactive Simulations

GPU Computing needs to be enabled via the acceleration dialog box before running a simulation. To turn on GPU Computing:

1. Open the dialog of the solver.
2. Click on the "Acceleration" button.
3. Switch on "Hardware acceleration" and specify how many GPU devices should be used for this simulation. The specification of the number of devices is per solver (e.g. if DC is used). Please note that the maximum number of GPU devices available for a simulation depends upon the number of tokens in your license.

Acceleration...



Hardware acceleration devices

5.2 Simulations in Batch Mode

If you start your simulations in batch mode (e.g. via an external job queuing system) there is a command line switch (`-withgpu`) which can be used to switch on the GPU Computing feature. The command line switch can be used as follows:²

In Windows:

```
"<CST_INSTALL_DIR>/CST Design Environment.exe" -m -r -withgpu=<NUMBER_OF_GPUS> "<FULL_PATH_TO_CST_FILE>"
```

In Linux:

```
"<CST_INSTALL_DIR>/cst_design_environment" -m -r -withgpu=<NUMBER_OF_GPUS> "<FULL_PATH_TO_CST_FILE>"
```

6 List of supported NVIDIA GPU hardware for CST Studio Suite 2023

The following tables contain some basic information about NVIDIA GPUs currently supported by the GPU Computing feature of CST Studio Suite, as well as the requirements for the host system equipped with the hardware. To ensure compatibility of GPU hardware and host system please check

<https://www.nvidia.com/object/tesla-qualified-servers.html>

- Please note that a 64 bit computer architecture is required for GPU Computing.
- CST Studio Suite officially supports the NVIDIA Tesla and Quadro cards listed in the table below. That means that these GPUs are well tested and validated with CST software and you can contact CST support in case you run into any problems.

²This example shows the batch mode simulation for the transient solver (`-m -r`). To learn more about the command line switches used by CST Studio Suite please refer to the online help documentation in the section 'General Features', subsection 'Command Line Options'.

- Please note that cards of different generations (e.g. "Ampere" and "Volta") can't be combined in a single host system for GPU Computing.
- Platform = Servers: These GPUs are only available with a passive cooling system which only provides sufficient cooling if it's used in combination with additional fans. These fans are usually available for server chassis only!
- Platform = Workstations: These GPUs provide active cooling, so they are suitable for workstation computer chassis as well.
- GPUs with reduced FP64 performance (e.g. GPUs where the FP64 performance is less than half the speed of the FP32 performance) are not well suited for solvers which require a high FP64 performance. Please check chapter [2 Supported Hardware](#) for affected solvers.
- GPUs of Kepler (sm_35 and sm_37) and Maxwell (sm_50) generation are marked as deprecated; they might not be supported in newer Nvidia driver and also newer MWS releases.
- Memory and problem size: For the Time Domain Solver (FIT) the rule of thumb is "available memory divided by 100" (e.g. a GPU with 16 GB of Memory will be sufficient for a simulation with 160 million meshcells. The memory consumption is dependent on the used features, so the maximum simulation size might be more or less than that).

Device Name	Generation	Platform	Min. CST Version
RTX A6000 Ada Gen ³	Ada	Workstation	2023 SP4
Tesla H100 SXM	Hopper	Server	2023 SP3
Tesla H100 PCIe	Hopper	Server	2023 SP3
Tesla A800-SXM4-80GB	Ampere	Server	2023 SP3
Tesla A800-PCIE-80GB	Ampere	Server	2023 SP3
RTX A5500 ³	Ampere	Workstation	2022 SP5
RTX A4500 ³	Ampere	Workstation	2022 SP5
Tesla A100-SXM4-80GB	Ampere	Server	2021 SP5
Tesla A100-PCIE-80GB	Ampere	Server	2021 SP5
Tesla A30	Ampere	Server	2021 SP5
Tesla A10 ³	Ampere	Server	2021 SP5
Tesla A16 ³	Ampere	Server	2021 SP5
Tesla A40 ³	Ampere	Server	2021 SP5
RTX A6000 ³	Ampere	Workstation	2021 SP5
RTX A5000 ³	Ampere	Workstation	2021 SP5
RTX A4000 ³	Ampere	Workstation	2021 SP5
A100-SXM4-40GB	Ampere	Server	2021 release
A100-PG509-200	Ampere	Server	2021 release
A100-PCIE-40GB	Ampere	Server	2021 release
Quadro RTX 8000 ³	Turing	Workstation	2019 SP6
Quadro RTX 6000 ³	Turing	Workstation	2019 SP6
Quadro RTX 5000 ³	Turing	Workstation	2019 SP6
Quadro RTX 4000 ³	Turing	Workstation	2019 SP6
Tesla T4 ³	Turing	Server	2021
Quadro GV100	Volta	Workstation	2018 SP6
Tesla V100-SXM2-32GB (Chip)	Volta	Server	2018 SP6
Tesla V100-PCIE-32GB	Volta	Server	2018 SP6
Tesla V100-SXM2-16GB (Chip)	Volta	Server	2018 SP1
Tesla V100-PCIE-16GB	Volta	Server	2018 SP1
Tesla P100-SXM2 (Chip)	Pascal	Server	2017 release
Tesla P100-PCIE-16GB	Pascal	Server	2017 release
Tesla P100 16GB	Pascal	Server	2017 release
Tesla P100-PCIE-12GB	Pascal	Servers	2017 SP2
Quadro P6000 ³	Pascal	Workstation	2017 SP 2
Quadro GP100	Pascal	Workstation	2017 SP2
Tesla P40 ³	Pascal	Server	2018 release
Tesla P4 ³	Pascal	Server	2018 release

³ **Important:** GPU device with reduced double precision performance; please check chapter 2 [Supported Hardware](#) for affected solvers.

Device Name	Memory (GB)	Bandwidth (GB/s)	FP32 (TFlops)	FP64 (TFlops)
RTX A6000 Ada Gen	48	960	91	1.5
Tesla H100 SXM	80	3350	67	34
Tesla H100 PCIe	80	2039	51	26
Tesla A800-SXM4-80GB	80	2000	19.5	9.7
Tesla A800-PCIE-80GB	80	2000	19.5	9.7
RTX A5500	24	768	34.7	1.0
RTX A4500	20	640	23.7	0.74
Tesla A100-SXM4-80GB	80	2000	19.5	9.7
Tesla A100-PCIE-80GB	80	2000	19.5	9.7
Tesla A30	24	933	10.3	5.3
Tesla A10	24	600	31	1
Tesla A16	16 x4	232 x4	8.6 x4	0.271 x4
Tesla A40	48	695	37	1.1
RTX A6000	48	768	40	1.25
RTX A5000	24	768	27.7	0.9
RTX A4000	16	448	19.2	0.6
Tesla A100-SXM4-40GB	40	1550	19.5	9.7
Tesla A100-PG509-200	40	1550	19.5	9.7
Tesla A100-PCIE-40GB	40	1550	19.5	9.7
Quadro RTX 8000	48	672	16	0.5
Quadro RTX 6000	24	672	16	0.5
Quadro RTX 5000	16	448	11	0.35
Quadro RTX 4000	8	416	7.1	0.22
Tesla T4	16	320	8	0.25
Quadro GV100	32	900	14	7
Tesla V100-SXM2-32GB	32	900	15	7.5
Tesla V100-PCIE-32GB	32	900	14	7
Tesla V100-SXM2-16GB	16	900	15	7.5
Tesla V100-PCIE-16GB	16	900	14	7
Tesla P100-SXM2	16	732	10.6	5.3
Tesla P100-PCIE-16GB	16	732	9.3	4.7
Tesla P100 16GB	16	732	9.3	4.7
Tesla P100-PCIE-12GB	12	549	9.3	4.7
Quadro P6000	24	432	12	0.2
Quadro GP100	16	720	10.3	5.2

7 List of deprecated NVIDIA GPU hardware for CST Studio Suite 2023

The GPUs listed in this section are marked as deprecated. They are still supported in this release, but they might not be supported in upcoming releases.

Device Name	Generation	Platform	Min. CST Version
Tesla M60 ³	Maxwell	Server/Workst.	2016 SP4
Tesla M40 ³	Maxwell	Server	2016 SP4
Quadro M6000 24GB ³	Maxwell	Workstation	2016 SP4
Quadro M6000 ³	Maxwell	Workstation	2015 SP4
Tesla K80	Kepler	Server	2014 SP6
Tesla K40 m/c/s/st/d/t	Kepler	Server/Workst.	2013 SP5
Quadro K6000	Kepler	Workstation	2013 SP4
Tesla K20 m/c/s/X	Kepler	Server/Workst.	2013 release

Device Name	Memory (GB)	Bandwidth (GB/s)	FP32 (TFlops)	FP64 (TFlops)
Tesla M60	8	160	4.8	0.150
Tesla M40	12	288	6.8	0.213
Quadro M6000 24GB	24	317	6.8	0.213
Quadro M6000	12	317	6.8	0.213
Tesla K80	12 x2	240 x2	4.1 x2	1.37 x2
Tesla K40 m/c/s/st/d/t	12	288	5	1.7
Quadro K6000	12	288	5	1.7
Tesla K20 m/c/s/X	5	208	3.5	1.1

8 Unsupported NVIDIA Hardware

If you have an NVIDIA GPU card which is not supported (please see the list of supported cards in the previous section), but fulfills the requirements below, you may enable it for simulations by following these instructions. Note that using unsupported and untested hardware is not recommended. CST will not provide any support for any problems resulting from using unsupported GPU cards and CST will not run any tests on these GPUs.

The NVIDIA GPUs that fulfill the following requirements may be enabled for simulations:

- capable of running CUDA 11.4 code
- at least 4 GB of free memory

To enable such GPUs, set the environment variable `CST_HWACC_ALLOW_UNVERIFIED_HARDWARE = 1`. Then all eligible installed and visible NVIDIA GPUs will be considered for computation. You can limit the visible devices by using the environment variable `CUDA_VISIBLE_DEVICES`.

9 NVIDIA Drivers Download and Installation

An appropriate driver is required in order to use the GPU hardware. Please download the driver appropriate to your GPU hardware and operating system from the NVIDIA [website](#). The driver versions listed below are verified for use with our software. Other driver versions provided by NVIDIA might also work but it is highly recommended to use the versions verified by CST.

We recommend the following driver versions for all supported GPU cards:

Windows: Version 529.89

Linux: Version 525.105.17

The recommended drivers will work for all supported Tesla and Quadro GPUs. For Quadro GPUs: Please check the NVIDIA Driver website for a similar Tesla GPU (same generation, e.g. Pascal or Volta) to be able to find the recommended driver. If you select a different driver version please make sure that the driver fulfills the minimum requirement for the CUDA compute capability of 11.4.

9.1 GPU Driver Installation

9.1.1 Installation on Windows

After you have downloaded the installer executable please start the installation procedure by double clicking on the installer executable. After a quick series of pop-up windows, the NVIDIA InstallShield Wizard will appear. Press the "Next" button and driver installation will begin (The screen may turn black momentarily.). You may receive a message indicating that the hardware has not passed Windows logo testing. In case you get this warning select "Continue Anyway".

If you are updating from a previously installed NVIDIA driver, it's recommended to select "clean installation" in the NVIDIA Installshield Wizard. This will remove the current driver prior to installing the new driver.

The "Wizard Complete" window will appear as soon as the installation has finished. Select "Yes, I want to restart my computer now" and click the "Finish" button.

It is recommended that you run the HWAccDiagnostics tool after the installation to confirm that the driver has been successfully installed. Please use HWAccDiagnostics_AMD64.exe which can be found in the AMD64 directory of the installation folder.

9.1.2 Installation on Linux

1. Login on the Linux machine as root.
2. Make sure that the adapter has been recognized by the system using the command
`/sbin/lspci | grep -i nvidia`
If you do not see any settings try to update the PCI hardware database of your system using the command
`/sbin/update-pciids`
3. Stop the X-Server by running in a terminal the command (You may skip this step if you are working on a system without X-server)

```
systemctl isolate multi-user.target  
(on systems using Systemd)
```

```
init 3  
(on systems using SysVinit)
```

4. Install the NVIDIA graphics driver. Follow the instructions of the setup script. In most cases the installer needs to compile a specific kernel module. If this is the case the gcc compiler and Linux kernel headers need to be available on the machine.
5. Restart the X-server by running the command (You may skip this step if you are working on a system without X-server)

```
systemctl isolate graphical.target  
(on systems using Systemd)
```

```
init 5  
(on systems using SysVinit)
```

Note: In case you're using the CST Distributed Computing system and a DC Solver Server is running on the machine where you just installed the driver you need to restart the DC Solver Server as otherwise the GPUs cannot be detected properly.

Note: The OpenGL libraries should not be installed on a system which has no rendering capabilities (like a pure DC Solver Server or a pure cluster node). This can be accomplished by starting the NVIDIA installer using the option "`-no-opengl-files`".

6. You may skip this step if a X-server is installed on your system **and** you are using a NVIDIA graphics adapter (in addition to the GPU Computing devices) in your system. If no X-server is installed on your machine or you don't have an additional NVIDIA graphics adapter, the NVIDIA kernel module will not be loaded automatically. Additionally, the device files for the GPUs will not be generated automatically. The following commands will perform the necessary steps to use the hardware for GPU Computing. It is recommended to append this code to your `rc.local` file such that it is executed automatically during system start.

```
# Load nvidia kernel module
modprobe nvidia

if [ "$?" -eq 0 ]; then

    # Count the number of NVIDIA controllers found.
    N3D=$(/sbin/lspci | grep -i nvidia | grep "3D controller" | wc -l)
    NVGA=$(/sbin/lspci | grep -i nvidia | grep "VGA compatible controller" | wc -l)

    N=$(expr $N3D + $NVGA - 1)
    for i in $(seq 0 $N); do
        mknod -m 666 /dev/nvidia$i c 195 $i;
    done

    mknod -m 666 /dev/nvidiactl c 195 255

fi
```

Please note:

- If you encounter problems during restart of the X-server please check chapter 8 "Common Problems" in the file `README.txt` located at `/usr/share/doc/NVIDIA_GLX-1.0`. Please also consider removing existing sound cards or deactivating onboard sound in the BIOS. Furthermore, make sure you are running the latest BIOS version.
- After installation, if the X system reports an error like `no screen found`, please check Xorg log files in `/var/log`. Open the log files in an editor and search for "PCI". According to the number of hardware cards in your system you will find entries of the following form: `PCI: (0@7:0:0)`. In `/etc/X11`, open the file `xorg.conf` in an editor and search for "nvidia". After the line `BoardName "Quadro M6000"` (or whatever card you are using) insert a new line that reads `BusID "PCI:7:0:0"` according to the entries found in the log files before. Save and close the `xorg.conf` file and type `startx`. If X still refuses to start, try the other entries found in the Xorg log files.
- You need the installation script to uninstall the driver. Thus, if you want to be able to uninstall the NVIDIA software you need to keep the installer script.
- Be aware of the fact that you need to reinstall the NVIDIA drivers if your kernel is updated as the installer needs to compile a new kernel module in this case.

9.2 Verifying Correct Installation of GPU Hardware and Drivers

As a final test to verify that the GPU hardware has been correctly installed, the following test can be executed: Log in to the machine and execute the HWAccDiagnostics_AMD64 program found in the AMD64 subfolder of your CST installation (Windows) or in the folder LinuxAMD64 on a Linux system. The macro "Check GPU Computing Setup" in the Solver macros performs exactly this check. The output of the tool should look similar to the following picture if the installation was successful.

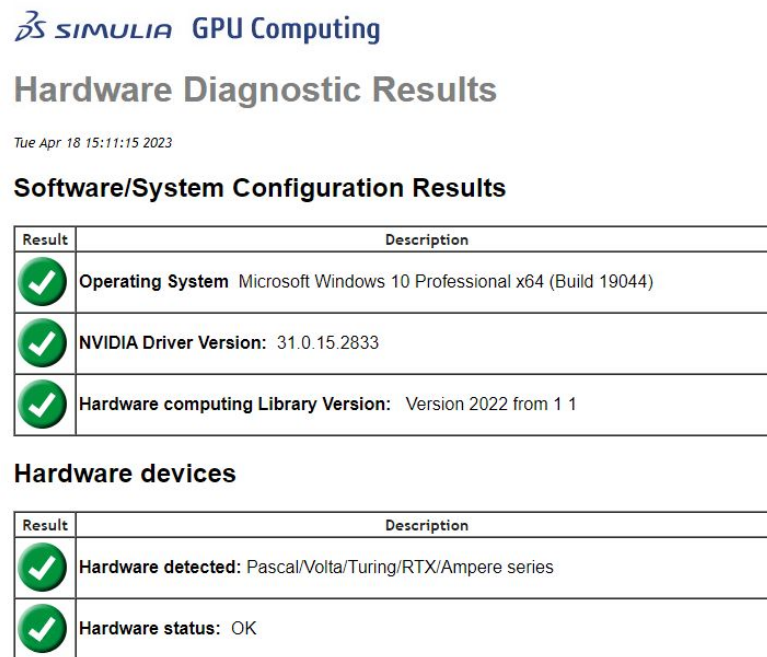


Figure 1: Output of HWAccDiagnostics_AMD64.exe tool.

9.3 Uninstalling NVIDIA Drivers

9.3.1 Uninstall Procedure on MS Windows

To uninstall NVIDIA drivers, select "NVIDIA Drivers" from the "App & features" list and press the "Uninstall" button (see fig. 2). After the uninstall process has finished you will be prompted to reboot.

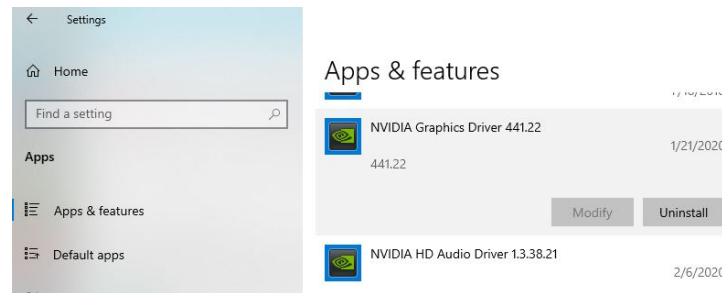


Figure 2: "App & features" dialog on Windows

9.3.2 Uninstall Procedure on Linux

Start the installer with the "-uninstall" option. This requires root permissions.

10 NVIDIA Usage Guidelines

10.1 The Error Correction Code (ECC) Feature

ECC can detect and eventually correct problems caused by faulty GPU memory. Such GPU memory errors typically cause unstable simulations. However, this feature deteriorates the performance of older GPU hardware (all cards of the Fermi, Kepler, and Maxwell series are affected). Therefore, we recommend disabling the feature. If simulations running on GPU hardware become unstable it is recommended to enable ECC temporarily as a diagnostic tool to determine whether the problems are caused by a GPU memory defect. Please also refer to section 12.

The latest NVIDIA GPU hardware (Pascal) has native ECC support with no performance overhead. For those GPUs ECC can't be switched off.

The ECC feature can be managed by using either the NVIDIA Control Panel or the command line tool `nvidia-smi`. Please note, that on Windows 7, Windows Server 2008 R2, and newer version of Windows the following commands have to be run as administrator.

10.1.1 Managing the ECC Feature via Command Line

This procedure works on all supported versions of Windows and on all supported Linux distributions.

The command requires administrator privileges on Windows and root privileges on Linux, respectively.

1. Locate the file `nvidia-smi`. This file is typically found in "`c:\Program Files\NVIDIA Corporation\NVSMI`" or in `/usr/bin` on Linux.
2. Open up a command prompt/terminal window and navigate to this folder.
3. Execute the following command:
`nvidia-smi -L`
4. Please note down how many GPUs are found.
5. To disable ECC: Please execute the following command for each of the GPUs:
`nvidia-smi -i <number_of_the_GPU_card> -e 0`
6. To enable ECC: Please execute the following command for each of the GPUs:
`nvidia-smi -i <number_of_the_GPU_card> -e 1`
7. Reboot.

10.1.2 Managing the ECC Feature via NVIDIA Control Panel

This procedure works on all versions of Windows.

1. Start the Control Panel via the Windows start menu.
2. Start the NVIDIA Control Panel.
3. Search for the term "ECC State" in the navigation tree of the dialog and open the "ECC State" page of the dialog by clicking on the tree item.
4. Disable or enable the ECC feature for all Tesla devices (see fig. 3).

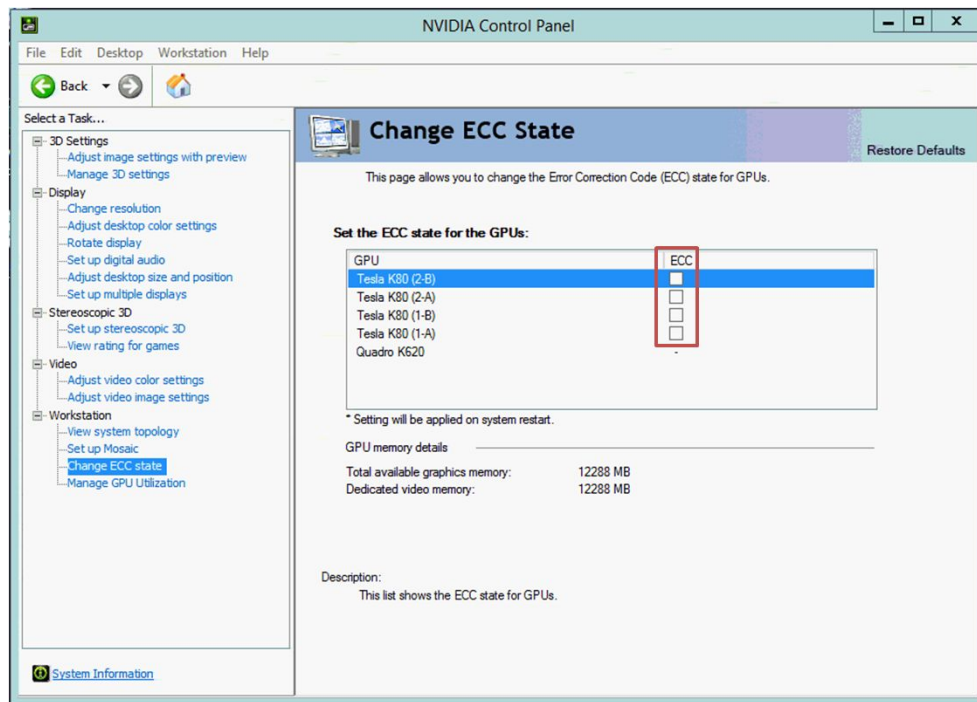


Figure 3: Switch off the ECC feature for all Tesla cards.

10.2 Tesla Compute Cluster (TCC) Mode (Windows only)

When available, the GPUs have to operate in TCC mode. **Please note that the TCC mode is currently required for A-solver GPU computing.**

10.2.1 Enable the TCC Mode

When available, the GPUs have to operate in TCC mode⁴. Please enable the mode, if not yet enabled.

Please note that the following commands require administrator privileges.

1. Locate the file `nvidia-smi`. This file is typically found in `"c:\Program Files\NVIDIA Corporation\NVSMI"`.
2. Open up a command prompt and navigate to this folder.
3. Execute the following command:
`nvidia-smi -L`
4. Please note down how many GPUs are found.
5. For each of the GPUs, please execute the following command:
`nvidia-smi -i <number_of_the_GPU_card> -dm 1`
6. Reboot.

10.2.2 Disabling the TCC Mode

If available, this feature should always be enabled. However, under certain circumstances you may need to disable this mode.

Please note that the following commands require administrator privileges.

1. Locate the file `nvidia-smi`. This file is typically found in `"c:\Program Files\NVIDIA Corporation\NVSMI"`.
2. Open up a command prompt and navigate to this folder.
3. Execute the following command:
`nvidia-smi -L`
4. Please note down how many GPUs are found.
5. For each of the GPUs, please execute the following command:
`nvidia-smi -i <number_of_the_GPU_card> -dm 0`
6. Reboot.

⁴The TCC Mode is available on all Tesla and on most Quadro cards. This mode is not available for Quadro cards which are connected to a display/monitor.

10.3 Exclusive Compute Mode

Nvidia GPUs allow to set different compute modes which indicates whether individual or multiple compute applications may run on the GPU.

- "Default" means multiple contexts are allowed per device.
- "Exclusive Process" means only one context is allowed per device, usable from multiple threads at a time.

In case of "Exclusive Process" the user has to make sure that no other process is running on the GPU before he starts a GPU solver run using CST Studio Suite.

10.4 Display Link

Some cards of the Tesla series provide a display link to plug in a monitor. Using this display link has the following implications:

- The TCC Mode of the card cannot be used. This deteriorates the performance.
- GPU Computing can't be used in a remote desktop session.

Because of these limitations we recommend using an additional graphics adapter for the graphics output, or if available, an onboard graphics chipset.

10.5 Combined MPI Computing and GPU Computing (Windows only)

For combined MPI Computing and GPU Computing the TCC mode of the GPU hardware must be enabled (see [10.2](#)).

10.6 Service User (Windows only)

If you are using GPU Computing via the CST Distributed Computing system and your DC Solver Server runs on Windows then the DC Solver Server service must be started using the Local System account (see [fig. 4](#)). The CST Studio Suite installer installs the service by default using the correct account.

10.7 GPU Computing using Windows Remote Desktop

For users with a LAN license, GPU Computing using RDP can be used in combination with Tesla or Quadro GPU cards as long as there is no monitor connected to the GPU.

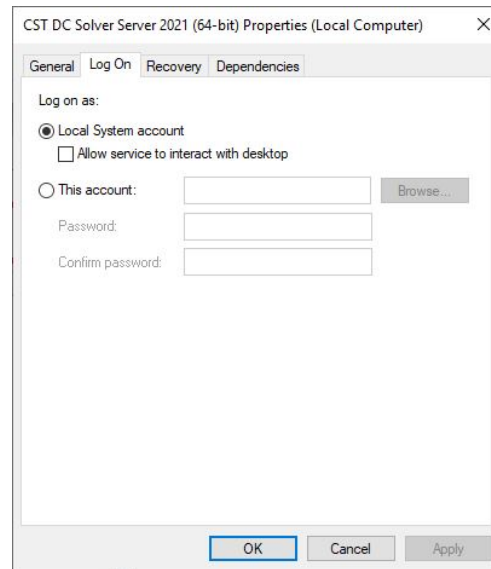


Figure 4: Local System Account.

10.8 Running Multiple Simulations at the Same Time

Running multiple simulations in parallel on **the same** GPU card will deteriorate the performance. Therefore we recommend to run just one simulation at a time. If you have a system with multiple GPU cards and would like to assign simulations to specific GPU cards please refer to section [10.13](#).

10.9 Video Card Drivers

Please use only the drivers recommended in this document or by the hardware diagnostics tool (See section [9.2](#)). They have been tested for compatibility with CST products.

10.10 Operating Conditions

CST recommends that GPU Computing is operated in a well ventilated temperature controlled area. For more information, please contact your hardware vendor.

10.11 Latest CST Service Pack

Download and install the latest CST Service Pack prior to running a simulation or HWAccDiagnostics.

10.12 GPU Monitoring/Utilization

Locate the file `nvidia-smi`. This file is typically found in "`c:\Program Files\NVIDIA Corporation\NVSMI`" on Windows or in `/usr/bin` on Linux. If you start this tool with the command line switch `-l` or `-loop` it will show the utilization and other interesting information such as the temperatures of the GPU cards. The `-l` option makes sure that the tool runs in a loop such that the information gets updated every couple seconds. For more options please run `nvidia-smi -h`. If you want to check the GPU utilization only, you can also run the graphical tool `NvGpuUtilization` (Windows only). This file is typically found in "`c:\Program Files\NVIDIA Corporation\Control Panel Client`".

10.13 Select Subset of Available GPU Cards

If you have multiple GPU cards supported for GPU computing in the same machine you may want to specify the cards visible to the CST software such that your simulations are only started on a subset of the cards. This can be accomplished in two different ways.

10.13.1 Environment Variable `CUDA_VISIBLE_DEVICES`

The environment variable `CUDA_VISIBLE_DEVICES` which contains a comma separated list of GPU IDs will force a process (such as a CST solver) to use the specified subset of GPU cards only.⁵ If this variable is set in the environment of the CST software or globally on your system the simulation will be started on the cards listed in the `CUDA_VISIBLE_DEVICES` list only.

Example: Open a shell (`cmd` on Windows, or `bash` on Linux) and enter

- `set CUDA_VISIBLE_DEVICES=0`

on Windows or

- `export CUDA_VISIBLE_DEVICES=0`

on Linux to bind all CST solver processes started from this shell to the GPU with ID 0. To make the setting persistent for all CST instances started on the system you may add the variable to the global system environment variables.

10.13.2 Distributed Computing

The CST Distributed Computing (DC) system can be used to assign the GPU cards of a multi-GPU system to different DC Solver Servers. The solver processes executed by a certain DC Solver Server will only be able to access the GPU cards assigned to this Solver Server (see fig. 5). Please refer to the online help documents of CST Studio Suite (section "Simulation Acceleration", subsection "Distributed Computing") to learn more about the setup and configuration of the DC system.

⁵Execute the command `nvidia-smi -L` to get the GPU IDs of your cards.

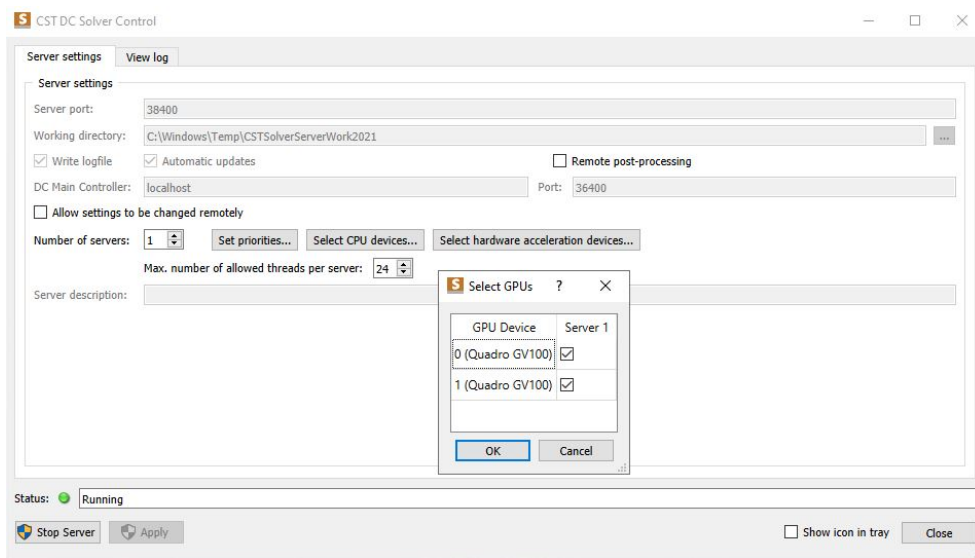


Figure 5: Assignment of GPUs to specific DC Solver Servers.

11 NVIDIA GPU Boost

NVIDIA GPU Boost™ is a feature available on the recent NVIDIA Tesla products.

This feature takes advantage of any power and thermal headroom in order to boost performance by increasing the GPU core and memory clock rates. The Tesla GPUs are designed with a specific Thermal Design Power (TDP). Frequently HPC workloads do not come close to reaching this power limit, and therefore have power headroom. A performance improvement can be expected when using the GPU Boost feature on the CST solvers. The Tesla GPUs come with a "Base clock" and several "Boost Clocks" which may be manually selected for compute intensive workloads with available power headroom. The Tesla GPUs give full control to end-users to select one of the core clock frequencies via the NVIDIA System Management Interface (nvidia-smi). For the K40 card, figuring out the right boost clock setting may require some experimentation to see what boost clock works best for a specific workload. NVIDIA GPU Boost on the Tesla K80 is enabled by default and dynamically selects the appropriate GPU clock based on the power headroom.

The GPU Boost feature can be employed by using either the NVIDIA Control Panel or the command line tool nvidia-smi. The nvidia-smi file is typically found in "c:\Program Files\NVIDIA Corporation\NVSMI" in Microsoft Windows or /usr/bin in Linux.

The following are common commands for setting the GPU Boost feature and checking GPU performance.

To display the current application clock in use execute the following command:

```
nvidia-smi -q -d CLOCK
```

```
Default Applications Clocks
Graphics           : 745 MHz
Memory             : 3004 MHz
Max Clocks
Graphics           : 875 MHz
SM                 : 875 MHz
Memory             : 3004 MHz
```

Before making any changes to the clocks, the GPU should be set to Persistence Mode. Persistence mode ensures that the driver stays loaded and does not revert back to the default clock once the application is complete and no CUDA or X applications are running on the GPU.

To enable persistence mode use the following command:

```
nvidia-smi -pm 1
```

To view the clocks that are supported by the Tesla board:

```
nvidia-smi -q -d SUPPORTED_CLOCKS
```

```
GPU 0000:02:00.0
Supported Clocks
Memory           : 3004 MHz
Graphics         : 875 MHz
Graphics         : 810 MHz
Graphics         : 745 MHz
Graphics         : 666 MHz
Memory           : 324 MHz
Graphics         : 324 MHz
```

Please note that the supported graphics clock rates are tied to a specific memory clock rate so when setting application clocks you must set both the memory clock and the graphics clock⁶. Do this using the `-ac <MEM clock, Graphics clock>` command line option.

```
nvidia-smi -ac 3004,875
```

```
Applications clocks set to "(MEM 3004, SM 875)" for GPU 0000:02:00.0
Applications clocks set to "(MEM 3004, SM 875)" for GPU 0000:03:00.0
Applications clocks set to "(MEM 3004, SM 875)" for GPU 0000:83:00.0
Applications clocks set to "(MEM 3004, SM 875)" for GPU 0000:84:00.0
```

Execute the following command to reset the application clocks back to default settings.

```
nvidia-smi -rac
```

Changing application clocks requires administrative privileges. However, a system administrator can remove this requirement to allow non-admin users to change application clocks by setting the application clock permissions to 'UNRESTRICTED' using the following command:

```
nvidia-smi -acp UNRESTRICTED
```

⁶The memory clock should remain at 3 GHz for the Tesla K40.

```
Applications clocks commands have been set to UNRESTRICTED for GPU 0000:02:00.0
Applications clocks commands have been set to UNRESTRICTED for GPU 0000:03:00.0
Applications clocks commands have been set to UNRESTRICTED for GPU 0000:83:00.0
Applications clocks commands have been set to UNRESTRICTED for GPU 0000:84:00.0
```

Please be aware that the application clock setting is a recommendation. If the GPU cannot safely run at the selected clocks, for example due to thermal or power reasons, it will automatically lower the clocks to a safe clock frequency. You can check whether this has occurred by typing the following command while the GPU is active:

```
nvidia-smi -a -d PERFORMANCE
```

12 NVIDIA Troubleshooting Tips

The following troubleshooting tips may help if you experience problems.

- If you experience problems during the installation of the NVIDIA driver on the Windows operating system please try to boot Windows in "safe mode" and retry the driver installation.
- NVIDIA DGX A100 and NVIDIA HGX A100 8-GPU server-systems: "cudaGetDeviceCount returned errorcode 802: system not yet initialized"
Please make sure nVidia fabric manager is installed and activated.
 - install nvidia DCGM.
 - terminate the nv-hostengine* first in order to enable fabric manager.
 - sudo nv-hostengine -t
 - Enable Fabric manager: service nvidia-fabricmanager start
 - document for reference:
<https://docs.nvidia.com/datacenter/dcgm/latest/dcgm-user-guide/overview.html>

This solution is taken from: <https://www.supermicro.com/support/faqs/faq.cfm?faq=31029>

- If you have a multi-GPU setup (4 or 8 GPUs) and you encounter an "out-of-memory" problem please set the environment variable
CUDA_DEVICE_MAX_CONNECTIONS=1.
In case your host system has at least 512 GB of RAM please also check out the following website: [GPU addressing capabilities](#).
- Please note that CST Studio Suite cannot run on GPU devices when they are in "exclusive mode". Please refer to section [10.3](#) on how to disable this mode.
- If you are using an external GPU device ensure that the PCI connector cable is securely fastened to the host interface card.
- Uninstall video drivers for your existing graphics adapter prior to installing the new graphics adapter.
- Make sure the latest motherboard BIOS is installed on your machine. Please contact your hardware vendor support for more information about the correct BIOS version for your machine.
- Use the HWAccDiagnostics tool to find out whether your GPU hardware and your driver is correctly recognized.
- GPU temperatures are crucial for the performance and overheating of GPU devices can lead to hardware failures. Please refer to section [10.12](#) for details.

- A faulty GPU device can be responsible for seemingly random solver crashes. To ensure that your GPU is working properly please run tests provided by the HWAccDiagnostics tool found in the CST installation. Examples of usage:
 - `HWAccDiagnostics_AMD64 -runstresstest -duration=2000 -percentage=99` will run a memory test on all GPUs one by one (helps to identify GPU hardware problems usually related to a specific GPU).
 - `HWAccDiagnostics_AMD64 -runstresstest2 -duration=2000 -percentage=99` will run a simulation on all GPUs concurrently first, followed by running the same simulation on each GPU separately (helps to identify thermal issues).
 - `HWAccDiagnostics_AMD64 -runstresstest2 -duration=2000 -percentage=99 -deviedID=0` will run the same simulation as before on device ID 0 only (helps to verify problems usually related to a specific GPU).
 - Please run `HWAccDiagnostics_AMD64 -h` to see all possible options.
- In case simulations are getting unstable when running on the GPU it's recommended to check the GPU memory by switching on the ECC feature on the GPU (see 10.1).
- If a GPU is not recognized during the installation please check if Memory Mapped I/O above 4GB is enabled in your bios settings.
- CUDA error 11: If you encounter an error message similar to
`CUDA error 11: invalid argument, dev: 1`
 you can usually fix this problem by using `CUDA_VISIBLE_DEVICES` so that only devices are visible for CUDA which will be used for simulations. Please refer to section 10.13 for details.
- TCC mode: GPUs running in WDDM instead of TCC mode might eventually fail during memory allocations. It is highly recommended to put all GPUs in TCC mode to avoid these kind of problems (see 10.2).
- Please execute the `nvidia-smi` tool found in
`"c:\Program Files\NVIDIA Corporation\NVSMI"` on Windows and in `"/usr/bin"` on Linux in order to find out whether the GPUs are correctly recognized by the GPU driver.

If you need further assistance please contact your local 3DS/SIMULIA support team (<https://www.3ds.com/products-services/simulia/locations>).

13 List of supported AMD GPU hardware for CST Studio Suite 2023

The following tables contain some basic information about AMD GPUs currently supported by the GPU Computing feature of CST Studio Suite, as well as the requirements for the host system equipped with the hardware.

- Please note that currently only the Time Domain Solver (FIT) supports AMD GPUs.
- Please note that a 64 bit computer architecture is required for GPU Computing.
- CST Studio Suite officially supports the AMD GPUs listed in the table below. That means that these GPUs are tested and validated with CST software and you can contact CST support in case you run into any problems.
- Please do not combine different GPUs in a single host system for GPU Computing.
- Platform = Servers: These GPUs are only available with a passive cooling system which only provides sufficient cooling if it's used in combination with additional fans. These fans are usually available for server chassis only!
- Platform = Workstations: These GPUs provide active cooling, so they are suitable for workstation computer chassis as well.
- GPUs with reduced FP64 performance (e.g. GPUs where the FP64 performance is less than half the speed of the FP32 performance) are not well suited for solvers which require a high FP64 performance. Please check chapter [2 Supported Hardware](#) for affected solvers.
- Memory and problem size: For the Time Domain Solver (FIT) the rule of thumb is "available memory divided by 100" (e.g. a GPU with 16 GB of Memory will be sufficient for a simulation with 160 million meshcells. The memory consumption is dependent on the used features, so the maximum simulation size might be more or less than that).

13.1 Supported GPUs: General information

Device Name	Generation	Platform	Min. CST Version
Radeon VII	Radeon	Workstation	2022 SP1
Radeon VII pro	Radeon	Workstation	2022 SP1
Instinct MI50	Radeon	Server	2022 SP1
Instinct MI100	Radeon	Server	2022 SP1
WX 9100 ³	Radeon	Workstation	2022

13.2 Supported GPUs: Specifications

Device Name	Memory (GB)	Bandwidth (GB/s)	FP32 (TFlops)	FP64 (TFlops)
Radeon VII	16	1024	13.44	3.36
Radeon VII pro	16	1024	13.06	6.528
Instinct MI50	16	1024	13.41	6.705
Instinct MI100	32	1229	23.07	11.54
WX 9100	16	483	12.29	0.8

14 Unsupported AMD Hardware

If you have an AMD GPU card which is not supported (please see the list of supported cards in the previous section), but fulfills the requirements below, you may enable it for simulations by following these instructions. Note that using unsupported and untested hardware is not recommended. CST will not provide any support for any problems resulting from using unsupported GPU cards and CST will not run any tests on these GPUs.

The AMD GPUs that fulfill the following requirements may be enabled for simulations:

- at least 4 GB of free memory

To enable such GPUs, set the environment variable `CST_HWACC_ALLOW_UNVERIFIED_HARDWARE = 1`; after that all eligible installed and visible AMD GPUs will be considered for computation.

15 AMD Drivers Download and Installation

An appropriate driver is required in order to use the GPU hardware. Please download the driver appropriate to your GPU hardware and operating system from the AMD [website](#). The driver versions listed below are verified for use with our software. Other driver versions provided by AMD might also work but it is highly recommended to use the versions verified by CST.

We recommend the following driver versions for all supported AMD GPU cards:

Windows: Version 21.Q2.1

Linux: Version 21.Q2

The recommended drivers will work for all supported AMD GPUs.

15.1 GPU Driver Installation

Please follow the instructions on the AMD website for the various supported OS systems.

16 History of Changes

The following changes have been applied to the document in the past.

Date	Description
June 7 2022	initial version of this document
April 18 2023	update list of supported GPUs and drivers